



## Fire & Acoustic Socket Box Inserts



### Step One:

Pull through cable and make a small hole through insert.

### Step Two:

Pass cable through insert and fit insert into socket box.




### Step Three:

Fit socket cover as normal, screws can pass through the insert material.

### Step Four:

The flange of the insert should be hidden by the socket cover - any rough edges can be trimmed.

Note: The socket insert must be installed so that the flange sits proud of the plasterboard

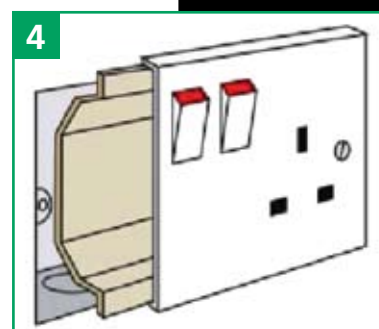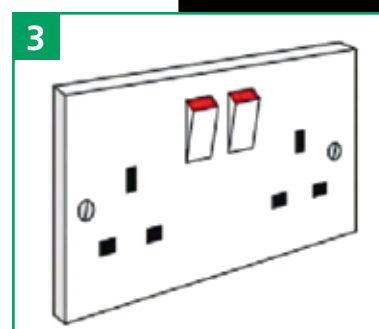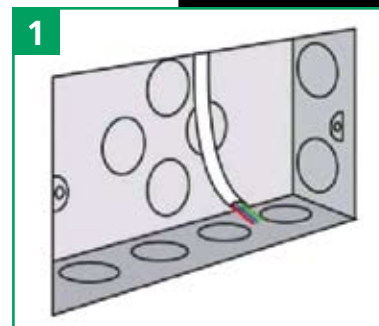

For further details, call John C Wilkins Acoustic Supplies on 01204 548400

### APPLICATIONS

- Offices
- Meeting Rooms
- Hotels
- Conference Centres
- Leisure Centres
- Schools
- Restaurants
- Showrooms

### JOHN C WILKINS ACOUSTIC SUPPLIES

Units 32-34, Waters Meeting Development,  
Britannia Way, Bolton BL2 2HH  
T: 01204 548400 F: 01204 366960