

# SPECIFIERS GUIDE

## JCW IMPACTA 4551


### PREPARATION

1. Preparation of the subfloor is crucial to the correct installation of Impacta 4551. Ensure the subfloor is sound, smooth, free of dust and dirt, and dry.
2. Impacta 4551 stretches slightly when rolled up so you must unroll it. Do this where it is to be installed and leave it for a few hours before installing.

### LAYING IMPACTA 4551

As long as BS8203:2001 and the following guidelines are observed, Impacta 4551 is easy to install.

1. Following extensive testing, JCW Impacta Adhesive is recommended to bond the product to the base floor.
2. When laying the Impacta 4551 into the adhesive, ensure you press from the centre outwards in order to exclude air and maximise contact with the adhesive.
3. Roll the Impacta 4551 from end to end and side to side to ensure maximum contact. Use a 68kg flooring roller.
4. Cut to size using a craft knife and straight edge. Ensure all edges are butt jointed.
5. Once you have completely covered the floor, wait for 30 minutes then roll again.
6. Wait until the adhesive is fully set before moving furniture or any other loads on the Impacta 4551.

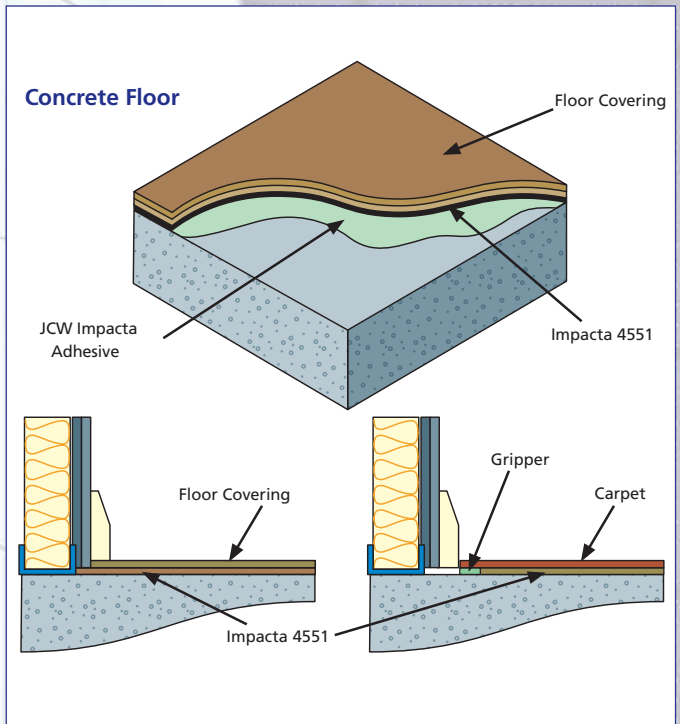

### INSTALLATION

For expert installation, we offer our own installation service anywhere in the UK. Your installation will be performed to the highest standards by skilled and experienced tradesmen. These experts understand the importance of fitting acoustic materials absolutely perfectly, and they have the specialist skills to ensure your JCW materials are fitted correctly every time. As they are both experienced and skilled, they are also able to provide a highly efficient and extremely cost-effective service.

**For further details, call John C Wilkins Acoustic Installations on 01204 387 029.**